

Please make sure to read the enclosed
Ninja® Owner's Guide prior to using your unit.

Setting up your unit

Oven Position

Select function (Bake, Broil, or Reheat). Set temperature/time.
Press START/STOP. No preheat needed.

BAKE



Even cooking with
temperature and time
settings.

BROIL



Top heat for a
crispy finish.

REHEAT



Gently warm
pre-cooked foods.

Tip

Sneak a peek while cooking by pulling out the bake tray.
Cooking will pause until the bake tray has been replaced in the unit.

Toaster Position

Select shade level. Push lever down to start toast cycle.
If desired, toggle on DEFROST for frozen foods.

TOAST



Even toasting on both
sides. Default function
in toaster position.

BAGEL



Targeted heat for a
perfectly toasted bagel.
Place bagels cut-side
toward you.

DEFROST



Toggle for thawing
frozen foods. Works
simultaneously with
Toast or Bagel.

Go to ninjakitchen.com/support for how-to videos

Please make sure to read the enclosed
Ninja® Owner's Guide prior to using your unit.

Flipping between positions



Flip up to the
Toaster Position

for **Toast, Bagel,**
and **Defrost.**

Crumb Tray
Wipe clean regularly

Flip down to the
Oven Position
for **Bake, Broil,**
and **Reheat.**



Bake Tray
Hand-washing recommended

Lever

Push back the lever on the right side of the unit
and insert the bake tray to start cooking.
Oven functions will not start unless the lever is pushed back
and the bake tray is inserted.

Looking for recipe inspiration, tips, and tricks?

Join us and thousands of Foodi™ friends
on the Official Ninja Foodi Family™ Community.
[Facebook.com/groups/NinjaFoodiFamily](https://www.facebook.com/groups/NinjaFoodiFamily)

    @NinjaKitchen

 [youtube.com/EPNinjaKitchen](https://www.youtube.com/EPNinjaKitchen)